Slow Juicer

10028001
10028002

KLARSTEIN

Sehr geehrter Kunde,

Wir gratulieren Ihnen zum Erwerb Ihres Klarstein Gerätes. Lesen Sie die folgenden Anschluss- und Anwendungshinweise sorgfältig durch und befolgen Sie diese, um möglichen technischen Schäden vorzubeugen. Für Schäden, die durch Missachtung der Sicherheitshinweise und unsachgemäßen Gebrauch entstehen, übernehmen wir keine Haftung.

Inhaltsverzeichnis

Technische Daten 2
Sicherheitshinweise 3
Geräteübersicht und Zubehör 3
Vor dem ersten Gebrauch 4
Zusammenbau und Inbetriebnahme 4
Reinigung und Pflege 6
Fehlersuche und Fehlerbehebung 7
Hinweise zur Entsorgung 7
Konformitätserklärung 7

Technische Daten

Artikelnummer	10028001, 10028002
Stromversorgung	220 V ~ 50 Hz
Leistung	150 W
Betriebszeit im Dauerbetrieb	≤ 10 Minuten
Zeitintervall Benutzungsdauer	≥ 10 Minuten

Sicherheitshinweise

Lesen Sie sich alle Hinweise sorgfältig durch und bewahren Sie die Bedienungsanleitung zum Nachschlagen gut auf.

- Schließen Sie das Gerät nur an Steckdosen an, die der Spannung des Geräts (220 V) entsprechen.
- Falls das Netzkabel beschädigt ist lassen Sie es vom Hersteller oder einem qualifizierten Fachbetrieb reparieren. Versuchen Sie nicht das Kabel selbst zu reparieren.
- Überprüfen Sie ob das Netzkabel, der Stecker, der Saftfilter, die Förderschnecke oder irgendein anderes Teil beschädigt ist. Falls ein Teil beschädigt ist, nehmen Sie den Entsafter umgehend außer Betrieb wenden Sie sich an unseren Kundendienst oder lassen Sie das Teil von einem qualifizierten Fachbetrieb ersetzen. Versuche Sie nicht Geräte- oder Zubehörteile selbst zu reparieren, Sie könnten sich verletzen.
- Versichern Sie sich, dass der Entsafter, der Einfülltrichter und alle anderen abnehmbaren Teile an der richtigen Stelle sitzen, bevor Sie den Stecker in die Steckdose stecken.

WARNUNG
Verletzungsgefahr! Schieben Sie Essen niemals mit den Fingern oder anderen Gegenständen in den Einfüllschacht, benutzen Sie immer den mitgelieferten Einfüllschieber. Berühren Sie während des Betriebs nicht die Förderschnecke oder andere bewegliche Teile.

- Benutzen Sie das Gerät nicht in der Nähe von Hitzequellen.
- Waschen Sie die Zubehörteile nicht in der Spülmaschine oder in sehr heißem Wasser ab.
- Schneiden Sie Obst und Gemüse vor dem Entsaften kleine Stücke. Diese sollten so klein sein, dass sie in den Einfüllschacht passen. Entfernen Sie vor dem Entsaften Kerne, harte Samen, Haut oder Schale.
- Ziehen Sie den Stecker, wenn Sie das Gerät länger nicht benutzen, Teile entfernen oder es reinigen. Lassen Sie das Gerät nicht ohne Inhalt laufen und überfüllen Sie es nicht.
- Verfärbungen am Sieb, dem Einfülltrichter und an den Plastikteilen sind nach mehrmaligem Entsaften normal, beeinflussen nicht die Qualität und sind auch nicht gesundheitsschädlich.

- Das Gerät ist mit einem intelligenten Schutzschalter ausgestattet, der das Gerät nach 20 Minuten Dauerbetrieb automatisch ausschaltet. Lassen Sie den Motor 20-30 Minuten lang abkühlen, bevor Sie es wieder in Betrieb nehmen.
- Das Gerät hat eine integrierte Strombegrenzung, die dem Schutz des Motors dient. Steigt die Stromstärke beim Entsaften harter Zutaten über 1,3 A stoppt der Motor automatisch und ein Pieptton ertönt.
- Falls während des Betriebs zu der Strom unterbrochen wird, stoppt der Motor automatisch. Schalten Sie das Gerät in diesem Fall aus und starten Sie den Rückwärtsgang, um Rückstände zu entfernen. Starten Sie das Gerät danach wieder im Vorwärtsgang und achten Sie darauf, ob das Gerät wieder normal läuft. Falls das Gerät wieder aussetzt, reinigen Sie die Förderschnecke und fahren Sie mit dem Entsaften fort.
- Füllen Sie kein heißes Wasser über 80°C ein und desinfizieren Sie das Gerät nicht. Alle Geräteteile, die Kontakt mit Lebensmitteln erfüllen die Zertifizierungsanforderungen der Nahrungsmittelindustrie für Hygiene.
- Tauchen Sie das Netzkabel, den Stecker und die Geräte-Basis nicht in Wasser oder andere Flüssigkeiten und spülen Sie die Teile auch nicht unter fließenden Wasser ab.
- Benutzen Sie zur Reinigung keine Stahlwolle oder chemische Reiniger, sie könnten das Gerät damit beschädigen.
- Um die Gefahr eines Stromschlags bei einer Störung oder Fehlfunktion zu verringern, muss das Gerät an eine geerdete Steckdose angeschlossen werden. Falls Sie sich nicht sicher sind, ob Ihre Steckdose den Anforderungen entspricht, lassen Sie sich von einem Elektriker beraten.
- Schließen Sie das Gerät nur an Steckdosen an, die der angegeben Spannung des Geräts entsprechen.
- Kinder, physisch und körperlich eingeschränkte Menschen sollten das Gerät nicht benutzen. Bewahren Sie das Gerät außerhalb der Reichweite von Kindern auf.

Geräteübersicht und Zubehör

1 Netzkabel
2 Gerätebasis
3 Hauptschalter
4 Verriegelung
5 Entsafter
6 Förderschnecke
7 Saftfilter mit eingebautem Sieb
8 Sicherheitskappe
9 Saftaufsatz
10 Einfüllschieber
11 Trichter
12 Saftbehälter
13 Fruchtfleischbehälter

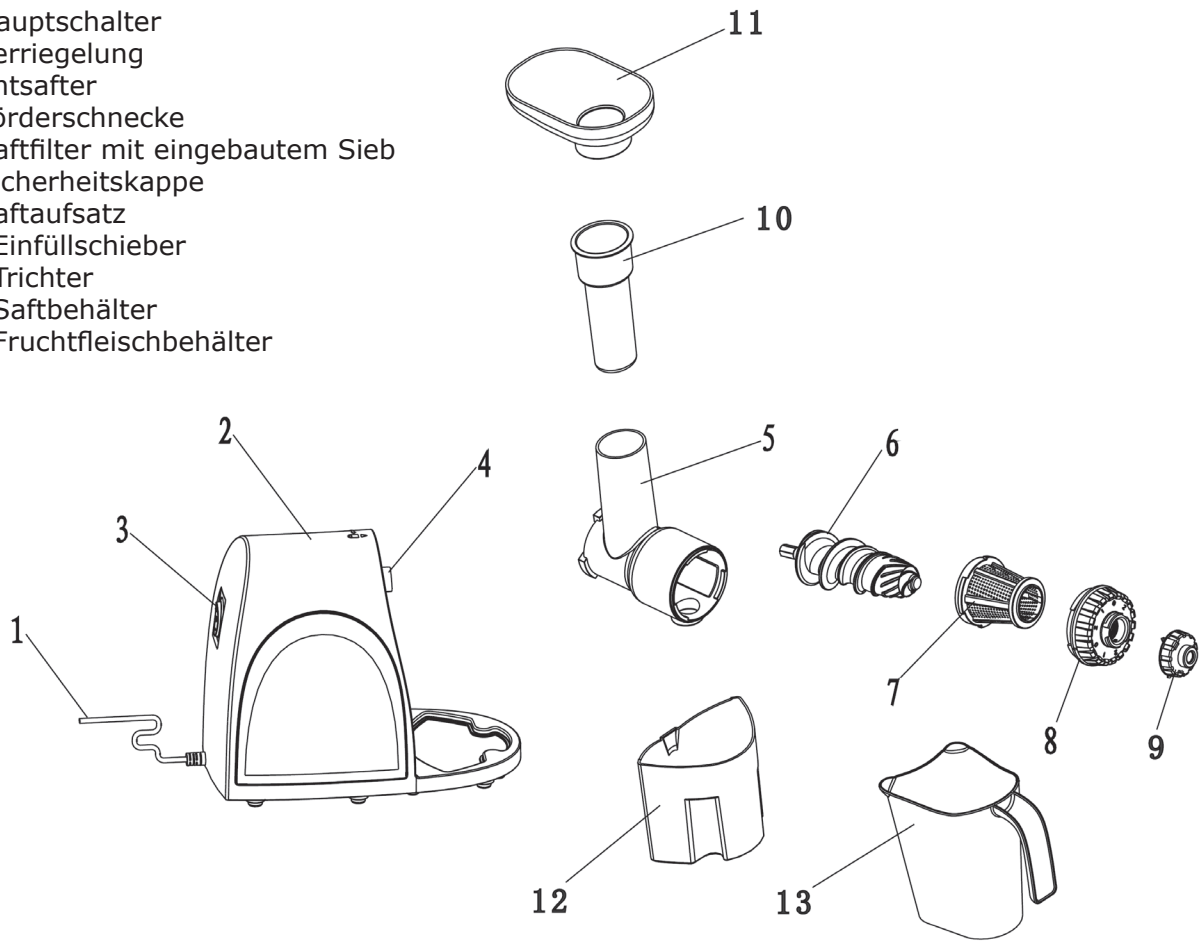

Vor dem ersten Gebrauch

Bevor Sie das Gerät erstmalig benutzen, reinigen Sie alle Teile, die Kontakt mit Lebensmitteln haben.

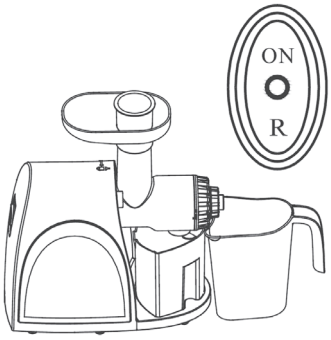

So benutzen Sie den Schalter:

ON: Normaler Betrieb
O: STOP/Gerät anhalten
R: Rückwärtsgang

Benutzen Sie den Rückwärtsgang zum Lösen der Rückstände, wenn der Entsafter blockiert ist. Halten Sie dafür die R-Taste 3 Sekunden lang gedrückt. Die Förderschnecke läuft nun rückwärts. Sobald Sie die Taste wieder loslassen, stoppt die Schnecke. Drücken Sie auf ON, um normal fortzufahren.

Zusammenbau und Inbetriebnahme

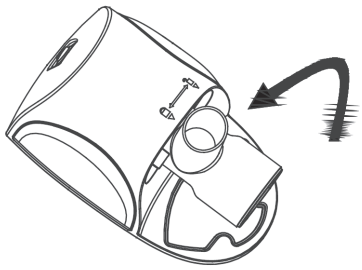

1

Verbinden Sie den Entsafter mit der Gerätebasis:

Halten Sie den Entsafter so, dass die Markierung ▼ auf das geöffnete Schloss mit Dreieck an der Gerätebasis zeigt. Stecken Sie den Entsafter in die Gerätebasis und drehen Sie ihn gegen den Uhrzeigersinn, bis er mit einem Klick einrastet.

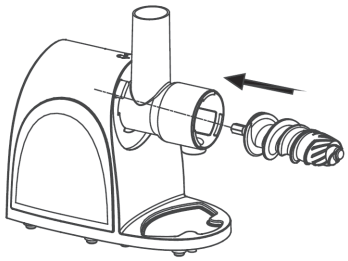

2

Richten Sie die Förderschnecke so aus, dass das breite Ende auf das Loch im Motorblock zeigt und setzen Sie die Förderschnecke ein.

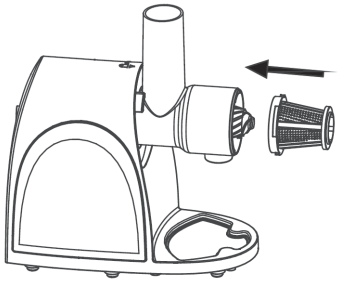

3

Drücken Sie das breite Ende des Saftfilters auf das hintere Ende des Entsafters. Richten Sie die Klemmschlitze am Saftfilter an den Klammern des Entsafters aus.

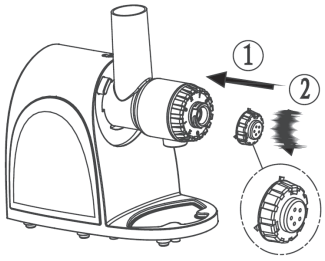

4

Verbinden Sie die Sicherheitskappe fest mit dem Entsafter. Drücken Sie die Kappe dafür horizontal in den Entsafter. Drehen Sie dann die Sicherheitskappe gegen den Uhrzeigersinn fest.

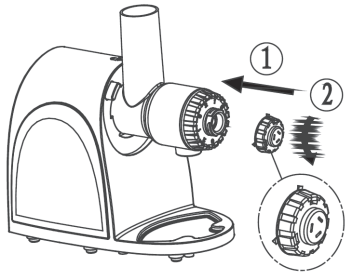

5 Verbinden Sie den Saftaufsatz mit der Sicherheitskappe. Drücken Sie den Aufsatz horizontal in die Sicherheitskappe und drehen Sie den Aufsatz gegen den Uhrzeigersinn fest.

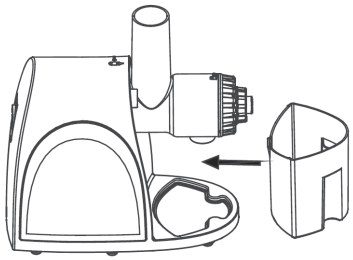

6 Setzen Sie den Saftbehälter in die Aussparung auf der Gerätebasis unterhalb des Saftauslasses.

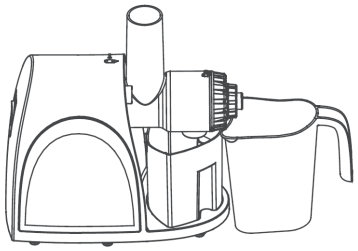

7 Stellen Sie den Fruchtfleischbehälter unten den Resteauslass des Entsafters, der sich beim Saftauslass befindet.

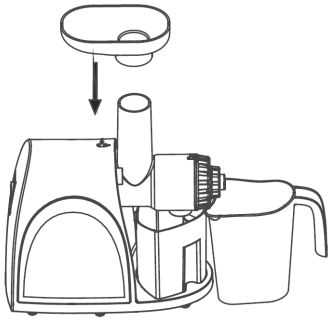

8 Setzen Sie den Trichter auf das obere Ende des Einfüllschachts. Der Trichter erleichtert das Einfüllen vorbereiteter oder kleinerer Zutaten, wie Trauben oder Beeren.

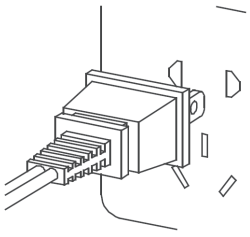

9 Achten Sie darauf, dass der Schalter am Gerät auf OFF steht, bevor Sie den Stecker anschließen.

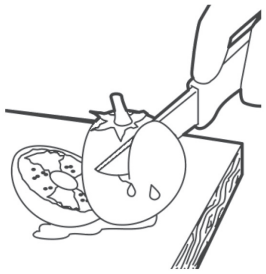

10 Schneiden Sie Obst und Gemüse vor dem Entsaften kleine Stücke und legen Sie diese auf dem Trichter ab. Die Stücke sollten so klein sein, dass sie in den Einfüllschacht passen. Entfernen Sie vor dem Entsaften Kerne, harte Samen. Haut oder Schale.

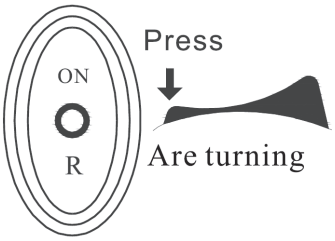

11 Nachdem Sie den Schalter auf ON gestellt haben, beginnt das Gerät etwa 10 Minuten lang zu laufen. Fassen Sie den Schalter nicht mit Nassen Händen an, um Stromschläge zu vermeiden.

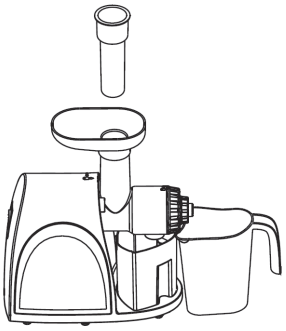

12 Geben Sie die Saftzutaten in den Einfüllschacht und drücken Sie sie mit dem Einfüllschieber herunter. Drücken Sie den Schieber fest herunter aber drücken Sie nicht zu stark. Schieben Sie Essen niemals mit den Fingern oder anderen Gegenständen in den Einfüllschacht, benutzen Sie immer den mitgelieferten Einfüllschieber. Wenn Saft- oder Fruchtfleischbehälter voll sind, schalten Sie das Gerät aus, ziehen Sie den Stecker und entfernen Sie den Saft und die Rückstände, bevor Sie mit dem Entsaften fortfahren.

Wenn Sie alle Zutaten verarbeitet sind und kein Saft mehr aus dem Saftauslass kommt, schalten Sie das Gerät aus und ziehen Sie den Stecker. Entfernen Sie den Saftbehälter nicht, bevor die Förderschnecke zum Stehen gekommen ist. Trinken Sie den Saft möglichst gleich, da er mit der Zeit Geschmack und Vitamine verliert. Entfernen Sie die Rückstände zeitnah.

Reinigung und Pflege

- Schalten Sie das Gerät vor der Reinigung aus und ziehen Sie den Stecker aus der Steckdose.
- Reinigen Sie das Gerät direkt nach der Benutzung.
- Waschen Sie die Gerätebasis nicht mit Wasser ab, entfernen Sie Flecken mit einem Baumwolltuch.
- Achten Sie beim Verstauen des Geräts darauf, dass es trocken und sauber ist.
- Nehmen Sie das Gerät zur Reinigung folgendermaßen auseinander:

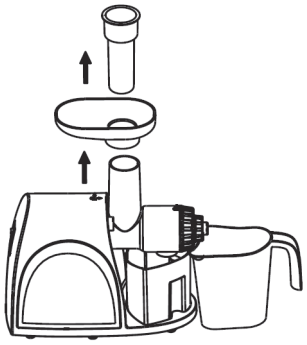

1 Entfernen Sie den Einfüllschieber und den Trichter.

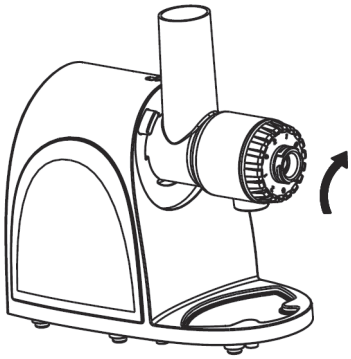

2 Drücken Sie auf die Verriegelung an der Oberseite der Gerätebasis und drehen gleichzeitig Sie die komplette Entsafter-Einheit im Uhrzeigersinn heraus (Die Einheit lässt sich nur entfernen, wenn die Verriegelung gedrückt wird).

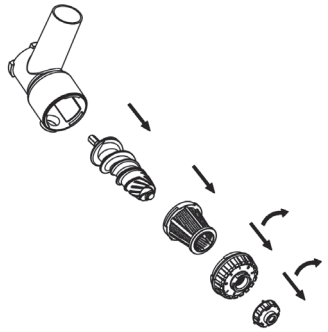

3 Nachdem Sie die Entsafter-Einheit entfernt haben lösen Sie den Saftaufsatz, die Sicherheitskappe, den Saftfilter und die Förderschnecke in der angegebenen Reihenfolge. Waschen Sie alle lösbaren Teile unter fließendem Wasser ab und trocknen Sie sie sorgfältig.

Fehlersuche und Fehlerbehebung

Viele Fehler können Sie einfach selbst beheben. Bevor Sie sich an den Kundenservice wenden gehen sie zunächst die folgende Liste durch.

Fehler	Mögliche Ursache	Lösung
Das Gerät geht nicht an, obwohl es angeschaltet ist und der Stecker eingesteckt ist.	Stecker und Steckdose haben keinen richtigen Kontakt zueinander.	Stecken Sie den Stecker erneut in die Steckdose.
		Verwenden Sie eine andere Steckdose und versuchen Sie es erneut.
		Lassen Sie das Gerät von einem Fachbetrieb überprüfen.
Der Motor riecht bei der ersten Benutzung unangenehm.	Das ist normal.	Falls der Motor auch nach mehrmaliger Benutzung unangenehm riecht, lassen Sie das Gerät von einem Fachbetrieb überprüfen.
Das Gerät hält während des Betriebs an.	Zu wenig Strom.	Überprüfen Sie den Stromanschluss.
	Zu viele Zutaten im Entsafter.	Ziehen Sie den Stecker und entfernen Sie überschüssige Zutaten
	Das Gerät läuft bereits über einen längeren Zeitraum.	Der Motor fährt nach einer kurzen Pause mit dem Entsaften fort.
Während der Benutzung sind Geräusche zu hören.	Die Förderschnecke und der Saftfilter sind nicht richtig eingebaut.	Installieren Sie die Förderschnecke und den Saftfilter erneut.
	Der Motor ist beschädigt.	Lassen Sie das Gerät von einem Fachbetrieb überprüfen

Entsorgung und Konformitätserklärung

Befindet sich die linke Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2002/96/EG. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

CE

Hersteller: CHAL-TEC Vertriebs- + Handels GmbH, Wallstraße 16, 10179 Berlin.
Dieses Produkt entspricht den folgenden Europäischen Richtlinien:
2004/108/EG (EMV)
2011/65/EU (RoHS)
2006/95/EG (LVD)

Dear Customer,

Congratulations on purchasing this Klarstein equipment. Please read this manual carefully and take care of the following hints on installation and use to avoid technical damages. Any failure caused by ignoring the mentioned items and cautions mentioned in the operation and installation instructions are not covered by our warranty and any liability.

Contents

Technical Data 8
Safety Instructions 8
Product Description and Accessory 9
Before first Use 10
Assembling and Use 10
Cleaning and Care 12
Troubleshooting 13
Environment Concerns 13
Declaration of Conformity 13

Technical Data

Item number	10028001, 10028002
Rated voltage	220 V ~ 50 Hz
Rated power	150 W
Continuous operating time	≤ 10 min.
Time interval	≥ 10 min.

Safety Instructions

Read all the safety and operating instructions carefully and retain them for future reference.

Be sure the input voltage of this appliance before using: AC220V 50Hz
Be sure to disconnect the power before disassembling or adjusting any part of the product.
The appliance has Y connection. If its power cord is damaged, please contact our customer service department or have it directly replaced at a service center designated by us to avoid dangers. Do not dismantle and repair it by yourself.
Before use, please check if the power cord, the plug, the juice strainer, the juicing screw and any other part is damaged. If any damage, STOP using the appliance and contact our customer service department promptly. Do not dismantle and repair it by yourself, otherwise dangers may happen.
Be sure the juicing body, hopper and other detachable parts installed in right place before connecting power supply.

WARNING
Do not push food with fingers, or other objects (like knife), always use the enclosed Food Pusher for pushing food. When the product is working, it strictly prohibits any touch on the juicing screw and other moving parts in order to avoid injury or product damage.

- Cut food ingredients into small pieces with sizes fitting the inlet port of the juicing body. Do not extract the vegetables or fruits before removing the cores, hard seeds or thick skin or shells.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Prohibited an idle running or overload.
- Dyeing of the strainer, inlet port and other plastic parts after juicing some fruits and vegetables is normal and will neither affect food eating nor harmful to health.

- Cut food ingredients into small pieces with sizes fitting the inlet port of the juicing body. Do not extract the vegetables or fruits before removing the cores, hard seeds or thick skin or shells.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Prohibited an idle running or overload.
- Dyeing of the strainer, inlet port and other plastic parts after juicing some fruits and vegetables is normal and will neither affect food eating nor harmful to health.
- Equipped with an Intelligent Protective IC, the appliance will stop automatically after 20 minutes of continuous running. In this case, wait for 20 to 30 minutes before continuous use until the motor has cooled down to prolong the life span of the appliance.
- The appliance with current limiting design, if juicing hard ingredients (such as carrots), when the current exceeds 1.3A, the motor will stop working with „Beep beep" hints. This is to protect the motor.
- During operations, if the appliance appears limit protection or stall causes the motor stops automatically, it should be turned off the power, then start the reversal function to retreat the ingredients. After that, restart the power switch „Forward" button to make the appliance work properly again. If the appliance still stall, then cleaning ingredients within the juicing screw and continue to use.
- Not allowed over 80°C hot water and microwave disinfection, so as to avoid damage. All the parts in contact with food complied with food hygiene certification materials.
- To protect against risk of electric shock, fire or personal injury, do not immerse power cord, plug and motor base in water or any form of liquid, neither rinse under tap water.
- Do not use steel wool or any chemical cleaner to clean the appliance. Otherwise is may change the col or of the appliance or could result in a fire.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Put the appliance at a place unreachable to children.

Product Description and Accessory

1 Power cord
2 Main body
3 Power switch
4 Lock
5 Juicing body
6 Juicing screw
7 Juice strainer with meshed strainer
8 Juicing body cap
9 Juicing button
10 Food pusher
11 Hopper
12 Juice cup
13 Pulp container

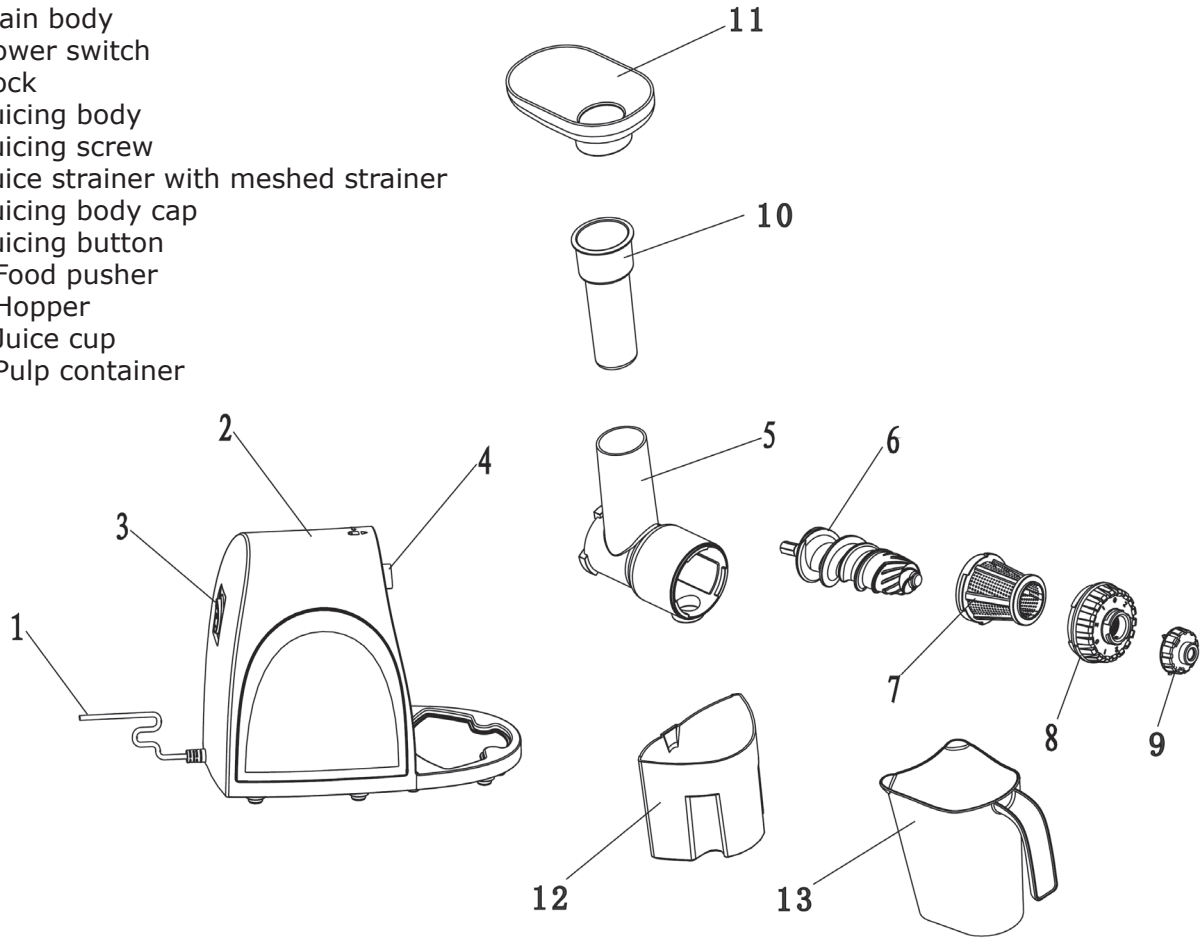

Before first Use

Before using the appliance for the first time, clean these parts which may contact with food ingredients thoroughly.

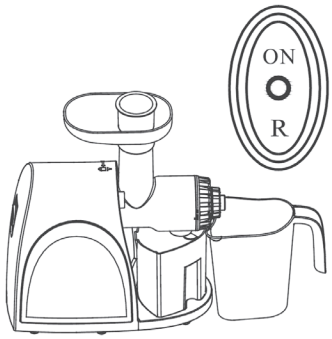

Control button operation instructions:

Button ON: For normal use
Button O: Close and stop
Button R: Reverse function

Use the reverse function when pulp discharge is blocked or the motor is clocked (Press and hold „R" for about 3 seconds, the juicing screw will begin to reverse. After „R" button is released, the juicing screw will stop reversing. If press the „On" button again at this time, the juicing screw will return to normal work).

Assembling and Use

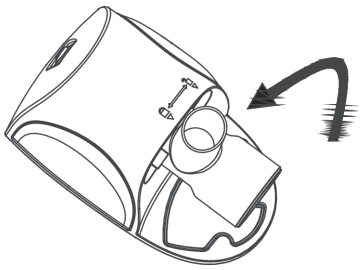

1

Connect the juicing body and the main body:

Align the mark ▼ on the juicing body with the mark „unlock triangular sign" on the main body and then put the juicing body into the main body (the three clips on the juicing body will realize alignment). Then turn the juicing body anticlockwise. When there is a click, it means that the connection is finished

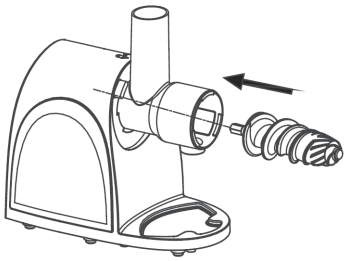

2

Align the polygonal shaft of juicing screw with the polygonal shaft hole of the motor mounted in the drive unit

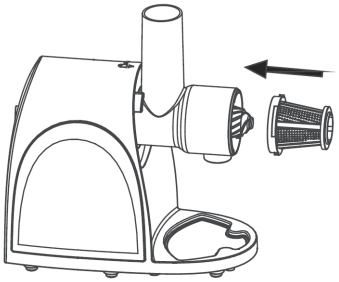

3

Fit the larger-opening end of the juice strainer into the tail of the juicing screw and push it while the three clips of the juice strainer align with the three clamping slots in the juicing body. (The juice strainer is used with the juicing button hereinafter, this function is used for juicing.)

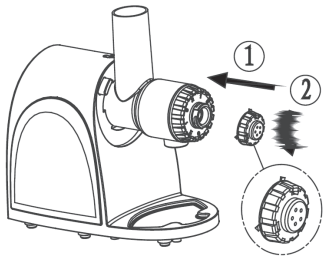

4

Push the juicing body cap into the juicing body horizontally while the three clips on the juicing body cap are staggered from the three clips on the juicing body. Then turn the juicing body cap anticlockwise until the figures „1" and „2" on it are on the right above positions.

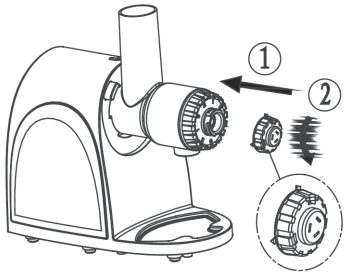

5 Push the juicing button into the juicing body cap horizontally while the three clips on the inner periphery of the juicing button are staggered from the three clips on the juicing body cap. Then turn the juicing button anticlockwise until the triangular projection on the edge of the juicing button aligns with the „2" position on the juicing body cap.

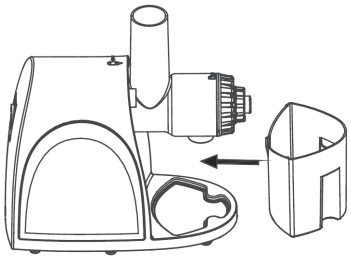

6 Put the juice cup in the corresponding groove on the main body and have its opening align with the bottom of the juice outlet of the juicing body.

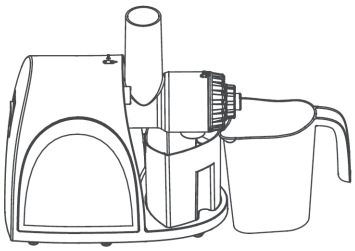

7 Put the pulp container below the pulp outlet of the juicing body and close to the juice cup.

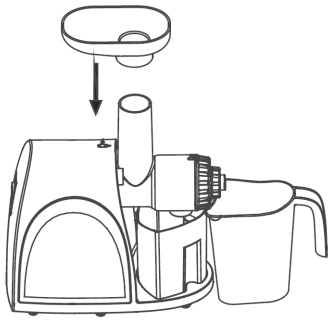

8 Install the hopper on the upper end of the inlet port of the juicing body. The hopper can make feeding of food ingredients more convenient, particularly when small-particle food ingredients like grapes and strawberries are processed.

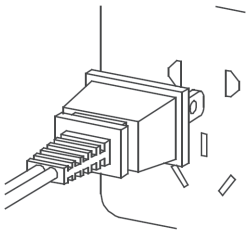

9 Connect the power supply for use of the appliance (make sure the switch is on the „OFF" position before the power supply is connected).

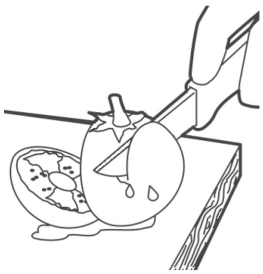

10 Wash vegetables and fruits, cut them into small pieces fitting the size of the inlet port and put them on the hopper. When extracting the juice, follow the methods in the safety instructions strictly. Before extracting vegetables or fruits with cores, hard seeds or thick skin or shells, remove their cores, hard seeds or thick skin or shells first.

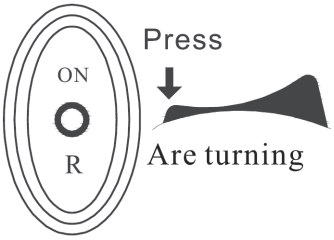

11 After the „ON" button of the switch is pressed, the appliance will begin to run. Interval ≤ 10 minutes. Do not touch the power switch with wet hands, otherwise an electric shock or leakage accident or a fire accident may happen.

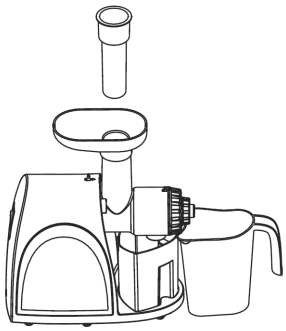

12 Put food ingredients into the inlet port on the juicing body and then push the food ingredients with the food pusher. Do not push the food ingredients violently but with a proper force enough to cut off the food ingredients. (Never put fingers or other objects into the inlet port on the juicing body. After the pulp container or the juice cup is full, disconnect the power supply and remove the pulp or pour the juice before continuing to use the appliance).

After food ingredient processing is finished and there is no more juice flowing out from the juice outlet, switch off the power switch and disconnect the power supply. Do not take the juice cup away from the juice outlet until both the juicing screw and the juice strainer have completely stopped. (The extracted juice should be drunk at once. If it is exposed in air for some time, its flavor and nutrition will be both affected.) Do not store pulp for a long time.

Cleaning and Care

- Before cleaning the appliance, DO switch off and disconnect the power supply.
- After use, clean the appliance promptly.
- Do not wash the main body with water but wipe the stains on with a cotton cloth.
- Before storing the appliance, make sure it is clean and dry.
- Following the below steps to clean the appliance after dismantling it:

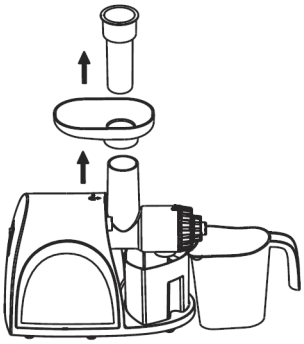

1 Take down the food pusher and the hopper.

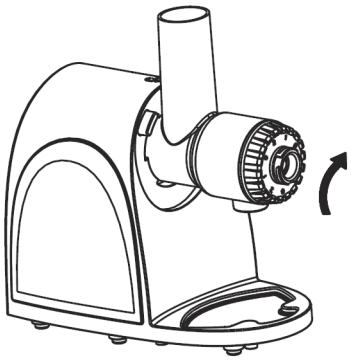

2 Press the lock on the upper-side of the juicing body and turn the juicing body clockwise at the same time to take out the juicing body. (The juicing body cannot be dismantled if the lock is not pressed.)

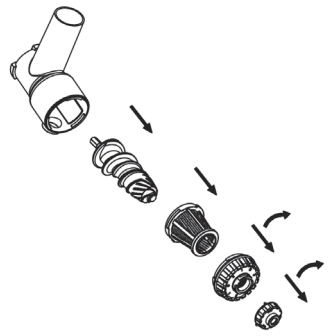

3 After taking down the juicing body, take down the juicing button, the juicing body cap, the juice strainer and the juicing screw in order. The detachable parts may be flushed with clean water.

Troubleshooting

Certain problems can be solved easily without calling out an engineer. Before conacting your local Service Centre, please carry out the checks listed underneath.

Fault	Cause analysis	Fault elimination
After the power supply is connected and the power switch is on, the appliance fails to run.	The power plug and the power socket have poor contact.	Insert the power plug again.
		Replace the power socket and try it again.
		Send the appliance to the nearest service center of our company for detection.
There is a bad smell from the motor in the first several times of use.	This is an normal phenomenon.	If there is still a bad smell after the appliance has been used for multiple times, send the appliance to the nearest service center of our company for detection.
The appliance stops during use.	The voltage is too low.	Check if the voltage is too low.
	There are too many food ingredients in it.	Disconnect the power supply and take out the surplus food ingredients.
	The appliance has run for a too long time.	It is a normal phenomenon. The motor will resume operation after some time of pause.
There is noise in are not properly ins use.	The juicing screw and the juice strainer are not properly installed.	Install the juicing screw and the juice strainer properly.
	The motor in the main body is damaged.	Send the appliance to the nearest service center of our company for detection.

Disposal and Declaration of Conformity

According to the European waste regulation 2002/96/EG this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailled information about recycling of this product, please contact your local council or your household waste disposial service.

CE

Producer: CHAL-TEC Vertriebs- + Handels GmbH, Wallstraße 16, 10179 Berlin.
This product is conform to the following European Directives:
2004/108/EC (EMC)
2011/65/EU (RoHS)
2006/95/EC (LVD)